



1718 W. Fullerton Chicago, IL 60614
 Ph: 773.770.1195 • Fax: 773.935.5613
 www.PureEdgeLighting.com • info@PureEdgeLighting.com
 © 2016 PureEdge Lighting. All Rights Reserved.


Installation Instructions for 4" Round and Square Fast Jack 24V Canopy, Power and Remote Power

FJ24-__-__


IMPORTANT INFORMATION

- This product is ETL listed for indoor dry locations.
- The product can be installed to a 4" electrical box with round plaster ring, or to an octagon electrical box.
- Minimum electrical box volume must be 6 cubic inches (98 cubic centimeters).
- For dimming information visit www.PureEdgeLighting.com.

SAVE THESE INSTRUCTIONS!

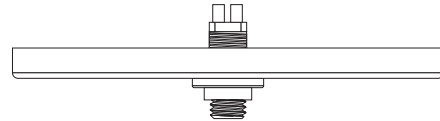

Install the Canopy

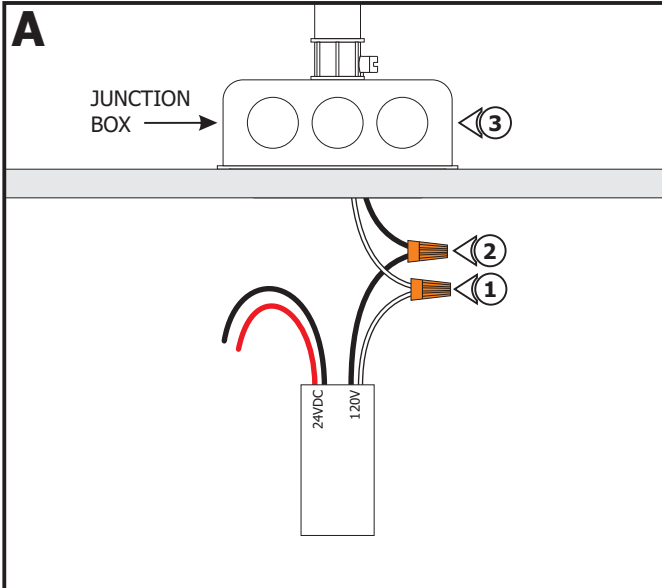

NOTE: Omit steps 1 through 3 if using remote power supply.


NOTE: Remote power supply must be installed within 40ft of junction box. Ensure remote power supply wires are present in the junction box. Refer to the instructions provided with the power supply.


- 1:** Connect the 120V white power supply wire to the neutral power wire using a wire nut.
- 2:** Connect the 120V black power supply wire to the hot power wire using a wire nut.
- 3:** Place the power supply and all wire nut connections inside the junction box.

4: Feed the 24VDC low voltage wires from the power supply through the crossbar center hole.

5: Mount the crossbar to the junction box holes with two #8-32 screws.

6: If applicable, make sure that the crossbar is grounded in accordance with local electrical codes.

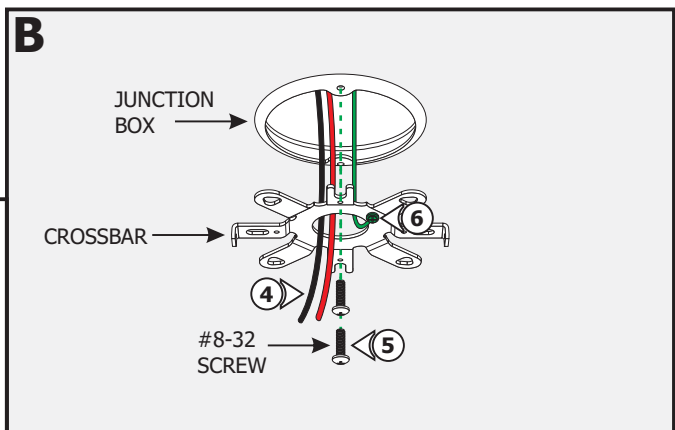


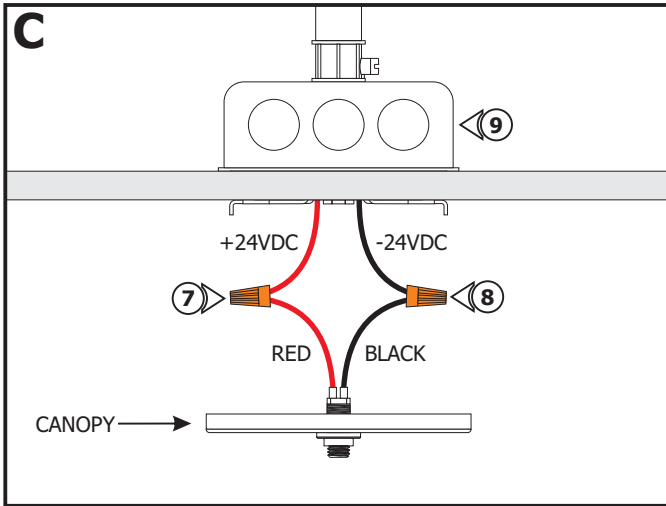


7: Connect the red canopy wire to the +24VDC power supply wire using a wire nut.

8: Connect the black canopy wire to the -24VDC power supply wire using a wire nut.

9: Place all wire nut connections inside the junction box.

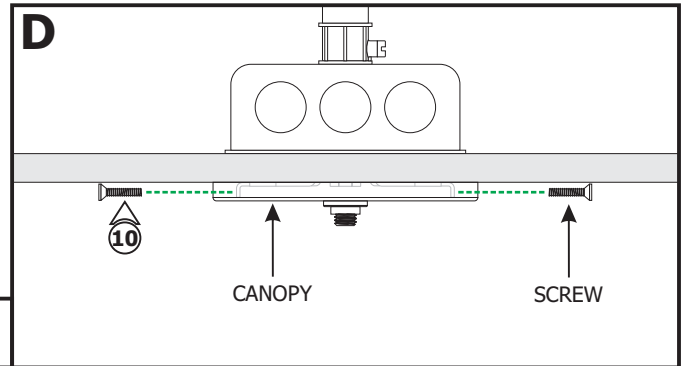

10: Align the canopy with the crossbar and secure it with the two #4-40 screws using a 1/16" Allen wrench.

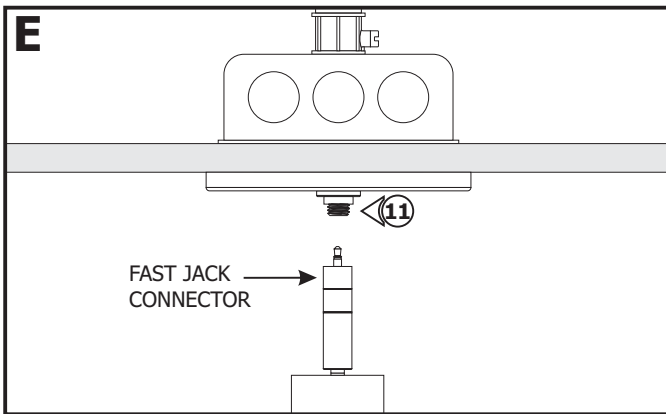

CAUTION: Risk of Fire: Do not load the port greater than 60W.

11: Use fingers to tighten the Fast Jack fixture connector into the Fast Jack canopy port.

General Wiring for Remote Power

